


# CONNEXT


## POST & BEAM




### EZ Directions for the T-REX EZ SLOTTER - [ctpostandbeam.com](http://ctpostandbeam.com)

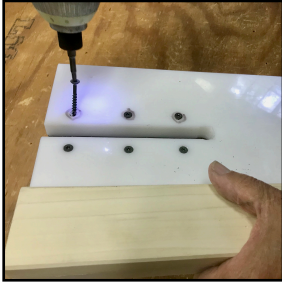


EZ Slotter is recommended for homeowner/contractor limited use with 6" x 6" and smaller beams. We encourage you to watch the 5-minute video on YouTube before using the EZ SLOTTER to cut your slots for T-REX Connectors at <https://youtu.be/jJNMy-2wfcw>.

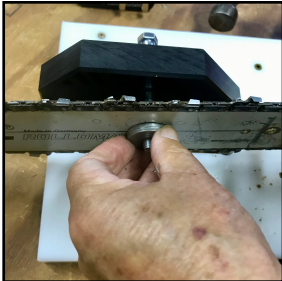

1. Drill a 3/8" hole in your chain saw bar. Center hole in the middle of the bar, approximately 4" from the motor.

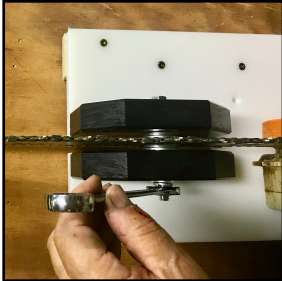

3. Unscrew the nut from the end of the bolt and remove (2) washers. Mount chainsaw in EZ Slotter and add the (2) washers that you previously removed so there are (2) on each side of the bar.

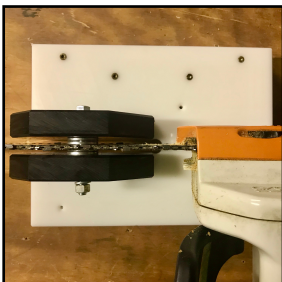

4. Replace block by reinstalling the (3) screws in the bottom of the EZ Slotter. Tighten the nut so bar is snug but moves freely.



6. Fasten the EZ Slotter with (2) screws to the top of your beam for stability, and you're ready to go! Watch the video.